SpeedDome® Optima LT Indoor Camera Dome

RASEL Series

Installation and Service Guide

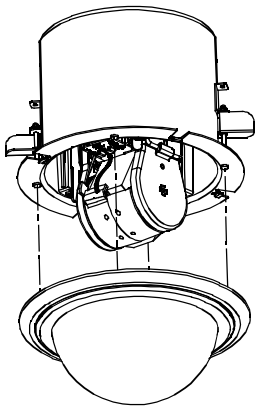

The SpeedDome Optima LT indoor camera dome mounts either to a hard ceiling or to a 2x2 tile ceiling using a mounting plate (instructions for the plate are supplied separately).

CAUTION: Save the box and packing materials. These materials are required should you need to ship the dome to a repair center.

Note: The dome accepts either cable or conduit. If running cable through a plenum ceiling, either plenum-rated cable or flexible conduit is required.

Contents

Warnings 2
Before You Begin 3
Installation 6
Troubleshooting 9
Parts List for Authorized Users 10
Specifications 12
Declarations 14

Customer Support

If you need assistance, contact your sales representative.

© Sensormatic 2003

Warnings

Please review the following warnings before you install or service the camera dome.

ALWAYS USE:

- Proper safety equipment for the location and type of installation.
- Proper lift equipment to reach the installation.
- Safety features of the lift equipment.

BE SURE:

- Electrical power is not connected to the dome when connecting wires. Camera will move when power is applied.
- Electrical power is not connected to nearby fixtures that you might touch during installation.

DO NOT install this dome in hazardous areas where highly combustible or explosive products are stored or used.

This dome runs on 24Vac. DO NOT connect line voltage to this dome.

North America power requirements: In North America, this device is intended to be supplied from a Class 2 power supply.

This installation should be made by a qualified service person and should conform to all local codes.

EU power requirements: This product runs on 24Vac. In the EU, it is intended to be powered from a Limited Power Source. A limited power source is a certified source of SELV, and if inherently limited, with 8 amps maximum output current, and a maximum of 100VA available; or if not inherently limited, fused with a maximum value of 3.3 Amps, meeting section 2.11 of IEC950, and a maximum of 250VA available. The power supply can be obtained through Sensormatic or through another source where the provider can furnish the verification. This is required to assure electrical safety in the product.

Stromanforderungen in der EU: Dieses Produkt wird mit 24 V Wechselstrom betrieben. In der EU ist es für den Betrieb durch eine begrenzte Stromquelle vorgesehen. Eine begrenzte Stromquelle ist eine zertifizierte SELV-Quelle (Schutzkleinspannung), bei inhärenter Begrenzung mit einem maximalen Ausgangsstrom von 8 A und 100 VA maximaler Verfügbarkeit, bei nicht inhärenter Begrenzung mit einer maximalen Sicherung von 3,3 A gemäß Abschnitt 2.11 der IEC950 und 250 VA maximaler Verfügbarkeit. Das Netzteil kann über Sensormatic oder eine andere Quelle bezogen werden, wobei der Anbieter den Nachweis der Konformität bereitstellen sollte. Dies ist zur Gewährleistung der elektrischen Sicherheit des Produktes erforderlich.

Before You Begin

To ensure a smooth and successful installation, observe the following requirements.

General Requirements

- Have electrical work comply with latest national electrical code, national fire code, and all applicable local codes and ordinances.
- Coordinate work with other trades to avoid interference.
- Verify existing site conditions and coordinate with the owner's representative and appropriate utilities as required.
- Obtain copies of all related plans, specifications, shop drawings and addenda to schedule and coordinate related work.
- Thoroughly review the project to ensure that all work meets or exceeds the above requirements. Bring alleged discrepancies to the attention of the CCTV Project Coordinator.

Mounting Requirements

Mounting space: Ensure there is the following space above the ceiling to accommodate the dome.

Height above ceiling: 170mm (6.7in)

Diameter: 192mm (7.5in)

Structural members: Verify that ceiling members can support the camera dome and mounting structure, if used.

Weight: 2.5kg (5.5 lbs)

Cable Requirements

Data cables: The following table shows cable requirements for SensorNet and Manchester networks. For more information about communication protocols and cable networks, see *Communication Protocols and Cable Networks*, 8000-2573-19.

Data cable requirements

	SensorNet	Manchester
Cable type	1 unshielded, twisted pair*	1 shielded twisted pair**
Wire gauge	22 AWG	18 AWG
Connection	Non-polarized	Polarized
Max. devices per cable run	32	3

* Power, data, and video cables can be ordered separately or within a composite cable that can be ordered in various lengths. Plenum-rated cables must be used in indoor ceilings used for environmental air return (called "other air space" in the National Electrical Code). Order parts through your distribution network.

Note: If you order cable from an outside source, wire colors may be different.

** Belden 88760 (plenum), or Belden 8760 cable (non-plenum) cable is recommended. Plenum-rated cables must be used in indoor ceilings used for environmental air return (called "other air space" in the National Electrical Code). Order cable directly from Belden by calling 1-800-235-3361.

Plenum ceilings: Cable must be rated for plenum or routed through flexible conduit. A cover plate for the dome accepts ½" conduit.

WARNING! Do not run cables adjacent to or in the same conduit as line voltage mains power.

Power cables. Make power cable lengths as short as possible to minimize the affects of low line voltages and outdoor cold temperature performance. Maximum cable length between a Class 2 LPS (low voltage) ac source, such as a J-box, and the dome depends on the ac line voltage. See the tables below for maximum cable lengths based on the worst-case low line voltages.

The line voltage must not go below the voltage shown for the dome to be able to power up and operate at the corresponding distances shown. Typically cable distances are used that provide a 15% margin between nominal and low line conditions. For example, if the nominal voltage measures 120Vac, restrict the cable length to the distance for .85 x 120 or approximately 100Vac.

Power cable requirements—Indoor Dome

The following table shows the maximum cable distance for several worst-case low line voltages between various indoor power sources and the indoor SpeedDome Optima. These distances are for Sensormatic composite cables, which use 18 AWG ac power wires.

This table applies to domes produced after October of 2001; distances are much less for earlier domes.

Indoor Dome AC Power Source	Worst-Case Low Line V	Meters (Feet)
28 VA Transformer 5604-0006-01	117	130 (425)
	100	80 (250)
	90	60 (200)
50 VA Transformer 5604-0044-01	117	160 (525)
	100	100 (325)
	90	60 (200)
1-position SensorNet RJ1SNUD	117	160 (525)
	100	100 (325)
	90	80 (250)
1-position SensorNet RJ1SNUD-1	240	160 (525)
	200	100 (325)
	180	80 (250)
6-position SensorNet Indoor J-Box RJ6SN	117	210 (675)
	100	130 (425)
	90	80 (250)
	240	210 (675)
	200	130 (425)
	180	80 (250)
Universal Transformer 0300-0914-01	117	130 (425)
	100	100 (325)
	90	60 (200)
Universal Transformer 0300-0914-03	240	160 (525)
	200	100 (325)
	180	80 (250)

Twisted Pair Adapter

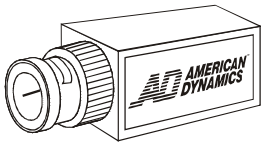

The ADACTP01BNC Twisted Pair Adapter (supplied) can be used to transmit video or video with up-the-coax (UTC) dome control signals over unshielded twisted pair (UTP) cables, point-to-point, up to 300m (1000ft).

The adapter mounts directly to the video source or receiver without additional cabling and uses Category 2-6 twisted pair wires to transmit the video and dome control signals. The adapter does not require power.

One adapter is supplied. If used, another adapter must be ordered to for the connection at the other end of the cable. The figure below shows twisted pair cable connections. See installation guide 8200-0298-01 for details.

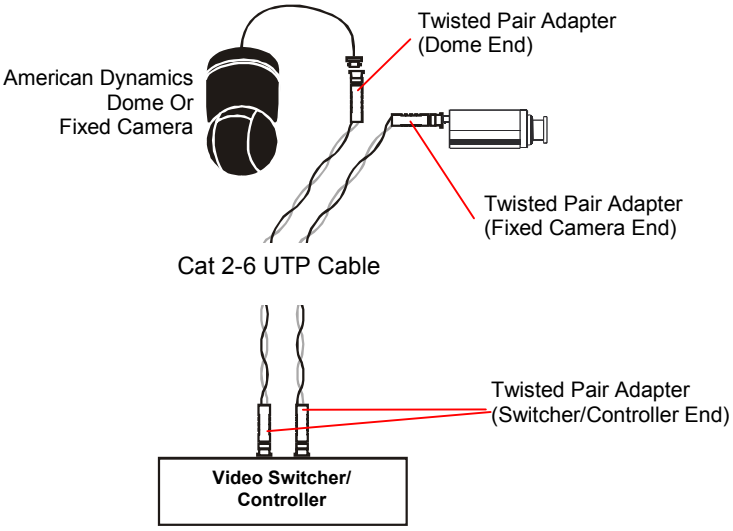

SensorNet/Manchester Line Termination

SensorNet and Manchester communication protocols require that the dome furthest from the video controller or junction box be terminated. Looking through the hole in the top of the dome, ensure switch S1 is set to “terminated” for the dome furthest from the video controller or junction box. All other domes should be “un-terminated”.

Setting the Camera Address

Accessed through the hole in the top of the dome are rotary switches SW1, SW2, and SW3. The address range for SensorNet is 001 to 255. The address range for Manchester is 0 to 64.

For example, for address 107, set SW3 to 1, SW2 to 0 (black dot), and SW1 to 7.

Compatibility with the VM96 Controller

If using a VM96 controller, the controller must be Version 5.2 or higher.

Power-Up Routine

After power is connected to the dome, the dome performs a homing routine. During the homing process, the camera will pan and then either:

- Go to the start point of the “apple peel” pattern, or
- If powered up once before, to the last position in memory.

Once the camera stops, the camera is online and is ready to be controlled.

Synchronizing Domes

To prevent picture rolling when switching from camera to camera, all domes can be synchronized to the ac source. A V-phase adjustment at the control console enables the dome to sync to any line phase.

Save Packaging Material

Should the camera dome need to be sent to a repair center, use the packaging that the dome was shipped in.

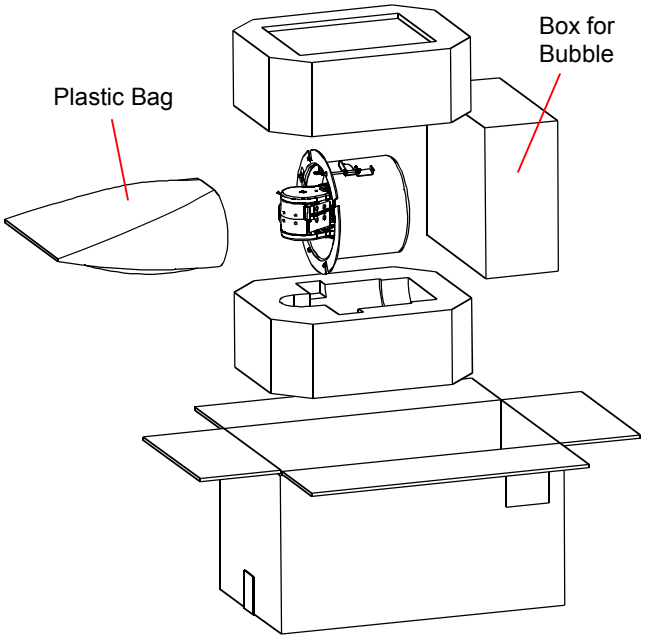

Installation

Parts required

Note: For installation to a tile ceiling, also order the UL-approved RH2x2 Metal Plate Mounting Kit.

Install Kit 0352-0020-01

Connector, 3-position (power)	1	2109-0254-02
Connector, 2-position (data)	1	2109-0756-01
Wire, hanging	3.6m (12ft)	2898-0007-01
Card, quick connect	1	2402-2055-02
Template, cutout, hard mount	1	2402-2054-01

Procedure

Use the following steps when attaching the dome to a hard ceiling.

1. Using template supplied, cut a hole in the ceiling. Run power and data cables and the video cable to the hole.

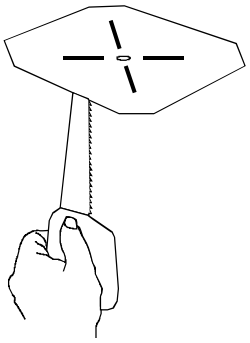

2. For ease of installation, adjust the two “swing out” mounting clips for ceiling thickness.

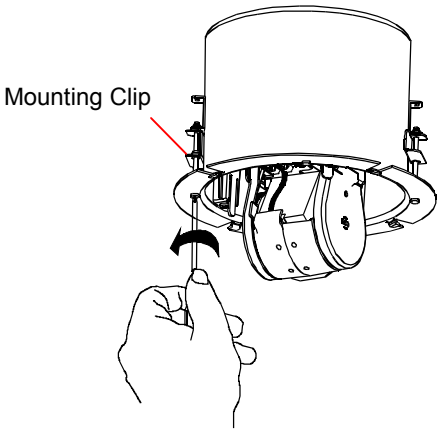

3. To expose connectors and settings at the top of the dome, remove the cover plate by removing one screw and loosening the other.

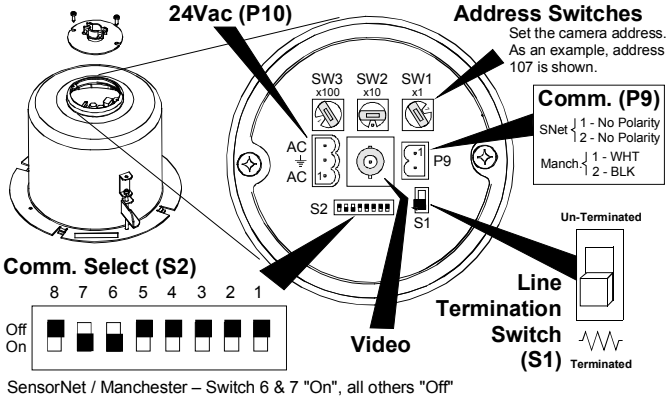

4. Set address switches SW1, SW2, and SW3 for the address (for example: 001–016 for VM16, 001–096 for VM96).

5. If daisy-chaining domes, the dome furthest from the video controller requires that termination switch S1 remain in the “terminated” position (resistor symbol). All other domes along the chain must be set to “un-terminated”.

6. Inside the opening, check communications DIP switch S2 for the correct settings. For SensorNet and Manchester, ensure switches 6 and 7 are “On”. Other switches should be “Off”.

7. Determine if conduit or cables will be used. If using conduit, remove the Romex clamp and use 1/2in. flexible conduit and appropriate fittings. If using cables, they must be plenum-rated if running through a ceiling plenum and they must be secured using the cover plate and Romex clamp.

8. Leaving .6m (2ft) of service loop so the dome can be dropped from the ceiling for servicing, run the cable through the cover plate and Romex clamp, if used.

9. Remove 2.5-3.8cm (1–1.5in) of jacket from the cable end and install power and data connectors supplied.

10. Plug connectors to the board according to the figure above.

11. If using conduit, attach it to the cover plate using the appropriate fittings and then reattach the cover plate. If using cable, reattach the cover plate to the dome using two screws and then tighten the Romex clamp against the cable (required to maintain the Plenum rating).

12. Attach a BNC connector to the video cable (if not using the Twisted Pair Adapter). Also attach the orange 3-pin power plug to connector P10 and the gray 2-pin data communications plug to connector P9. Wire colors in diagram refer to cables supplied by Sensormatic.

    Note: Use a small screwdriver to tighten the connector screws. DO NOT over tighten the connectors!

13. Plug video (or Twisted Pair Adapter), power, and data communications cables into their mating connectors in the top of the dome housing.

    WARNING! Ensure power is off at the source when connecting cables. Otherwise, the dome will operate during installation.

14. Reattach the cover plate to the dome housing.

15. Using safety wire, attach the dome to a strong structural ceiling member as follows:

    a. Find a strong structural member capable of supporting the dome. Wrap one end of the wire around this member and twist the wire around itself four times to secure.

    b. Run the other end of the wire through one of the holes above the swing out tabs. Twist the wire around itself four times to secure.

    c. Ensure the wire is taut!

    WARNING! Keep the wire as taut as possible. Do not secure to any component of a fire control system.

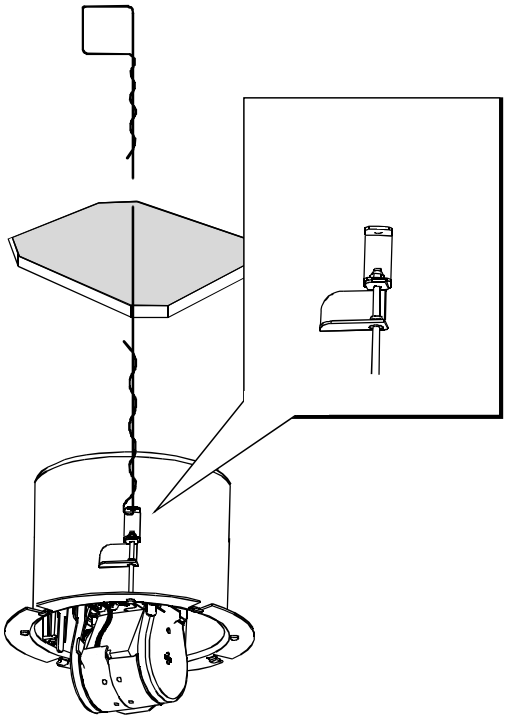

16. Insert the dome into the hole in the ceiling.

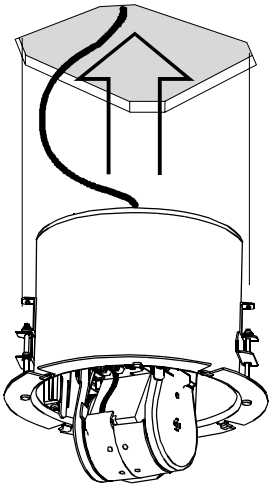

17. Turn each of the two locking screws clockwise to fully extend the “swing out” mounting clips and to seat them tightly against the top surface of the ceiling.

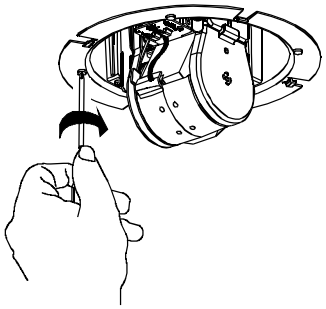

18. Apply power to dome.

    Note: When power is applied, the dome checks its function by performing a homing routine during which the camera pans and then either goes to the start point of the “apple peel” pattern or if powered up once before, to the last position in memory. Once the camera stops, the camera is online and is ready to be controlled.

    Also, green, red, and yellow LEDs will light in various patterns to indicate status. Typically, you do not need to view these LEDs unless a failure occurs during or after the routine. See “Troubleshooting” for an explanation of the LED patterns.

19. Once the homing routine completes, affix the bubble to the dome as follows:

    a. Place the large hole at the end of the lanyard over the screw head of the bubble and pull its end to snap it in place. Loop the lanyard to the inside of the housing.

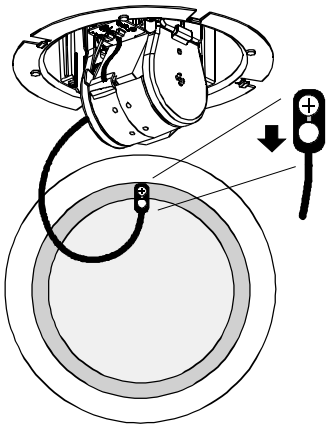

    b. Center the bubble over the dome housing and align its tabs with the mating tabs in the housing.

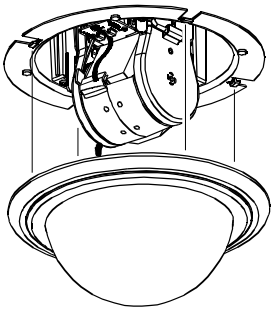

    c. Turn the bubble clockwise until it catches the tabs and stops.

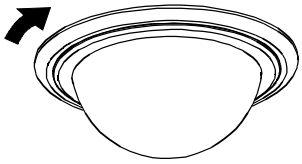

Troubleshooting

If a failure cannot be easily fixed, send the dome to a repair center.

No power (no LEDs light).

Check for power coming in from J-box or controller.

Homing routine does not complete.

Green, red, and yellow LEDs are visible through small holes in the dome housing that surround the camera yoke. After power up, the LEDs light as follows:

	GREEN (DS1)	RED (DS2)	YELLOW (DS3)
PLD Loading (approx. 20 sec)	On	Off	Off
Homing Process	Off	Blink	On
Looking for Network*	On	Off	On
Online Waiting for 1st Command**	Blink	Blink	On

* If the dome remains in this state, it cannot locate either the SensorNet, RS422, or Manchester network.

** The yellow LED remains on until it receives a PTZ movement command, then goes off. Further PTZ commands will cause the LED to blink; otherwise, the LED is off.

No video.

1. Check the video cable and its connection to the dome. If not OK, fix or replace the cable.
2. Check the iris setting. Open iris or set to auto iris.
3. If the problem cannot be corrected, send the dome to a repair center.

Video rolls when switching cameras.

Perform V-phase adjustment at the controller.

Contrast or color off.

1. Check the iris setting. Open iris or set to auto iris.
2. If the problem cannot be corrected, send the dome to a repair center.

Pan control absent or improper, but other control OK.

Send the dome to a repair center.

Tilt control absent or improper, but other control OK.

1. Check tilt belt operation. Fix the belt if necessary.
2. If the problem cannot be corrected, send the dome to a repair center.

Zoom, focus, and iris control is absent.

Check the flex cable connecting the camera the housing. If you see damage, send the dome to a repair center.

Only some camera control (for example, zoom and focus works, iris doesn't).

Send the dome to a repair center.

Parts List for Authorized Users

The following parts can only be ordered by authorized users. To become authorized, contact your sales representative.

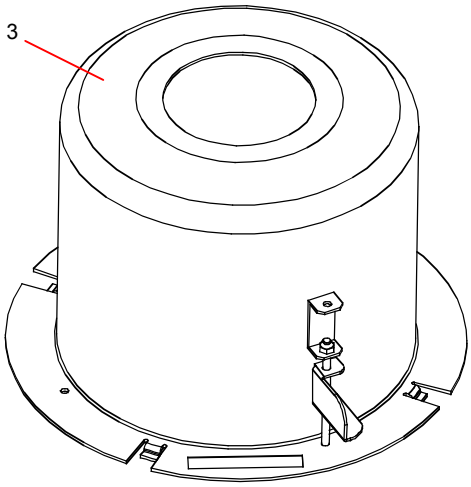

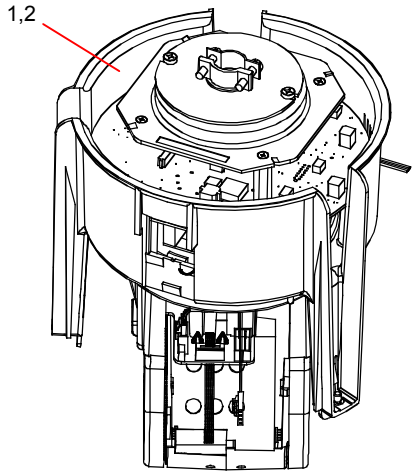

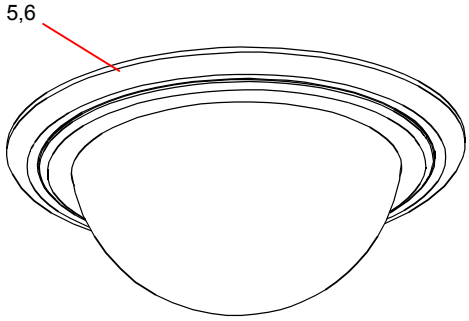

General

1	Chassis Assembly, NTSC	0101-0013-01
2	Chassis Assembly, PAL	0101-0013-02
3	Housing Assembly	0404-0009-01
4	Install Kit	0352-0020-01
5	Bubble Assembly, Clear	0100-2458-01
6	Bubble Assembly, Smoked	0100-2458-02

Tilt Assy. 0400-1207-01 (NTSC), -02 (PAL)

7	Base, Tilt	0500-9110-01
8	Gear, Camera Base	0500-9112-01
9	Tilt Upright (2)	0500-9168-01
10	Camera, Hitachi VK-S144, NTSC	2003-0037-11
11	Camera, Hitachi VK-S144, PAL	2003-0037-12
12	Timing Belt	2500-0041-01
13	Tilt Motor with Pully	3501-0024-01
14	PCB, Tilt Sensor	0301-1524-01
15	Ribbon Cable, 20mm, Blk	6007-0039-03

Base Assy. 0404-0008-01

16	Base, Pan	0500-9109-01
17	Slip Ring	2100-0006-02
18	Bearing, Pan	2510-0040-01
19	Pan Motor Assy.	0400-1240-01
20	PCB, Dome System	0301-1620-01

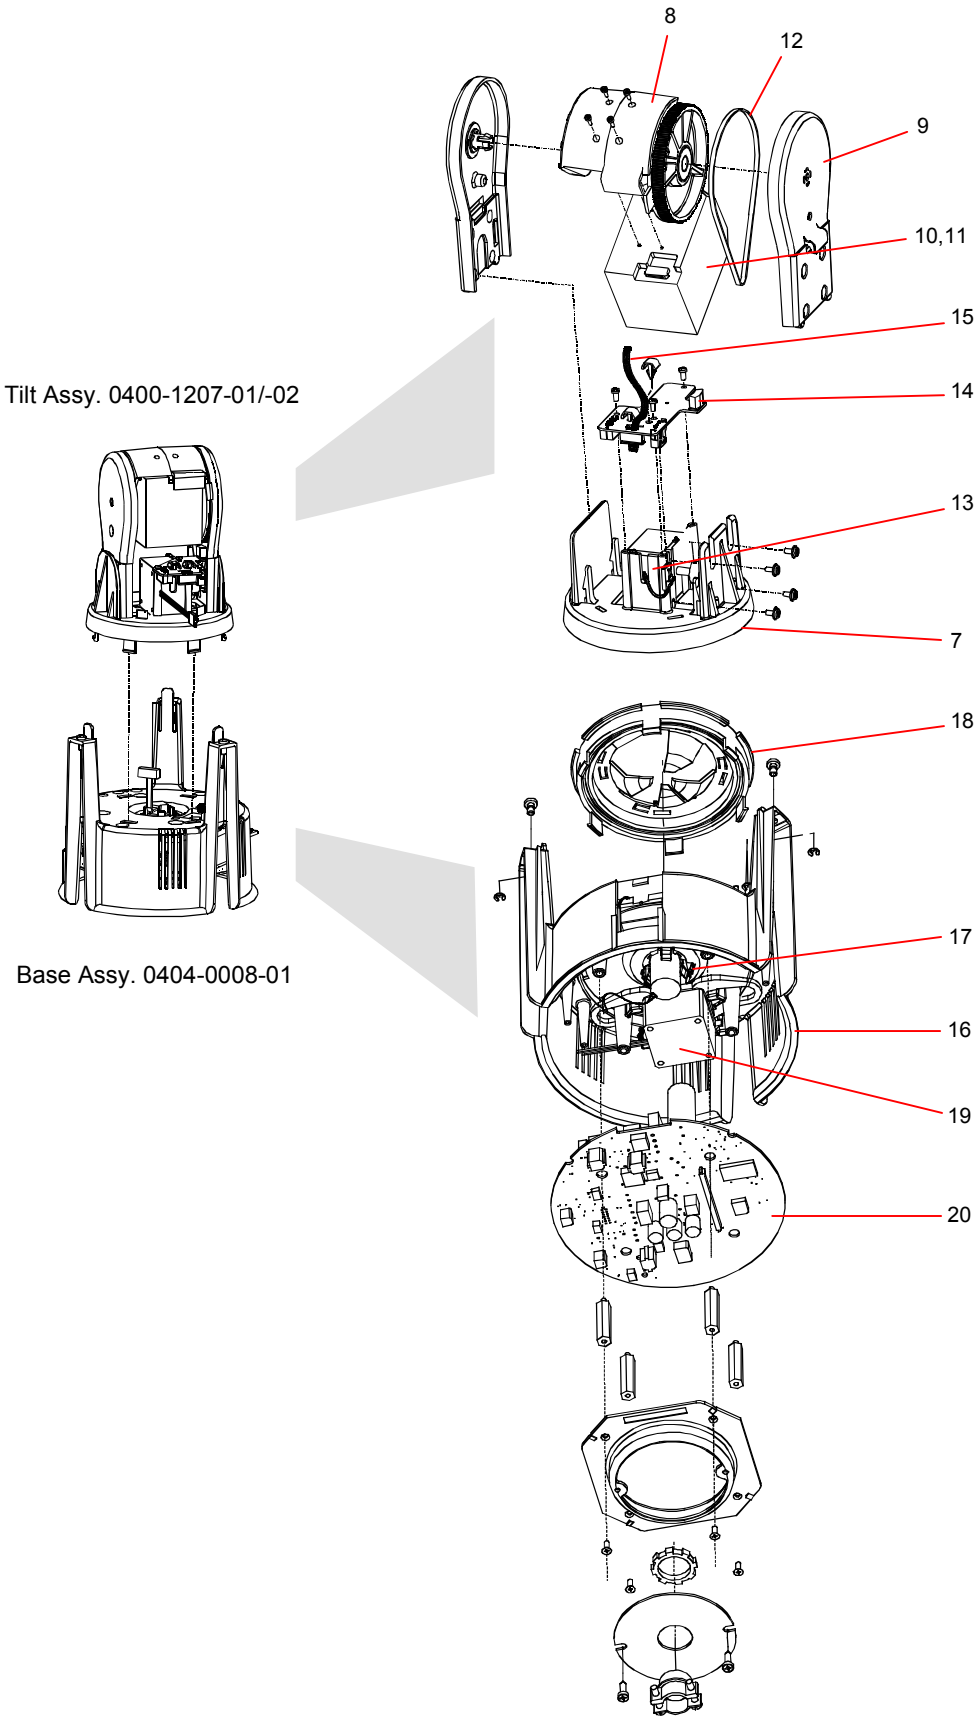

Tilt Assy. 0400-1207-01/-02

Base Assy. 0404-0008-01

Specifications

Operation

Manual pan speed	1–50° per second
Target pan speed	100° per second max.
Pan travel	360° continuous, no end stop
Manual tilt speed	1–50° per second.
Target tilt speed	50° per second max.
Tilt travel	>90°
Optical zoom	22X
Digital zoom	11X
Bubble density	Clear, f0
Tilt/Pan accuracy	±0.5°
Zoom/Focus accuracy	±0.5%
Quick View™ access	< 2 seconds to pan and tilt position
	< 3 seconds to full zoom position
	< 1 second focus on VM16 and VideoManager controllers
	< 7 seconds focus on VM96 and RV2715 controllers.
Synchronization	Automatically selected
Line locked	Remote V-phase adjustment
Internal	Built-in sync generator
Program storage	256K bytes of electrically programmable Flash Memory
Data storage	128kB of SRAM
Video output connector	Female BNC
Product life	5 years operation
	500,000 position changes

Color Camera Specifications

Type	Interline Transfer ¼" CCD array
Scanning system	2:1 interlace
Horizontal resolution	> 450 lines at center
Video out	1.0 Vp-p / 75 ohms composite
Signal/Noise	50dB (typical)
Minimum illumination	1.0 lux (20 IRE)
Gain control	Automatic (AGC)
White balance	Through the Lens (TTL) Automatic Tracing White Balance (ATW)

NTSC version:

Pickup device	768 (H) x 494 (V) pixels
Scanning	525 lines, 60 fields, 30 frames
Horizontal	15.734kHz
Vertical	59.9Hz

PAL version:

Pickup device	752 (H) x 582 (V) pixels
Scanning	625 lines, 50 fields, 25 frames
Horizontal	15.625kHz
Vertical	50Hz

Lens

Design	Aspherical
Focal length	4 to 88mm
Aperture	f1.6 (wide), f3.8 (tele)
Scanning area	3.2mm (H) x 2.4mm(V)
Viewing angle:	
4 mm	47.0°H x 35.2°V
88 mm	2.2°H x 1.65°V

Field-of-View Formulas:

Field-of-View Formulas:

$$\frac{\text{3.2 mm* x distance from camera (m)}}{\text{Focal length (mm)}} = \text{Horizontal view (m)}$$

$$\frac{\text{2.4 mm** x distance from camera (m)}}{\text{Focal length (mm)}} = \text{Vertical view (m)}$$

* Horizontal scanning area of pickup device (mm) in camera.
** Vertical scanning area of pickup device (mm) in camera.

Example: Wide angle view with lens at 6mm and viewed object at 10m.

$$\frac{\text{3.2mm x 10m}}{\text{6mm}} = \text{5.33m Horizontal view (m)}$$

$$\frac{\text{2.4mm x 10m}}{\text{6mm}} = \text{4.0m Vertical view (m)}$$

Electrical Specifications

Power Line

Input voltage	18–30Vac, Class 2 Limited Power Source
Design tolerance	16–36Vac
Line frequency	50/60Hz
Power consumption	21W max.
Power on inrush current	3A
Allowable drop out:	33ms
Connector:	Plug-in Euro-style terminal block 5.08mm
Max. cable distance	See chart on page 4.

Surge Protection

Video output	Gas discharge tube rated at: • 8/20µs impulse discharge current: 10kA • Ten 8/20µs impulses discharge current: 5kA 3.9 ohm series resistors Low capacitance Zener suppressor 6.5V 1500W
Power line	Gas discharge tube impulse rated at: • 8/20µs impulse discharge current: 10kA • Ten 8/20µs impulses discharge current: 5kA TVS rated at 60V, 250A, 1.5 Joules, 8/20µs impulse
SensorNet/Manchester	Gas discharge tube impulse rated at: • 8/20µs impulse discharge current: 10kA • Ten 8/20µs impulses discharge current: 5kA Isolation transformer coupled, 2000Vrms PTC resettable fuse protects transformer TVS rated at 5.6V, 40A, 0.1 Joules, 8/20µs impulse

SensorNet Communications

Address range	0 to 255
Bit rate:	230.4Kbps
Network distance	1km
Maximum loads	32 per node
Node repeaters	SensorNet junction boxes
Cable topologies	Daisy chain Backbone Star
Transmission medium	Single non-polarized unshielded twisted pair UTP 22AWG
Wire configuration	Single unshielded twisted pair UTP 22AWG non-polarized
Connector:	Plug-in Euro-style terminal block 5.08mm
Terminating resistor	120 ohms, switch selectable

Manchester Communications

Address range	1 to 64
Bit rate	31Kbps
Network distance	1.5km
Maximum loads	32 per node
Node repeaters	SensorNet junction boxes
Cable topology	Daisy chain
Transmission medium	Single polarized twisted pair 18AWG (Beldon 8760)
Connector	Plug-in Euro-style terminal block 5.08mm
Terminating resistor	120 ohms, switch selectable

Mechanical Specifications

Camera Dome

Housing diameter	190mm (7.5in)
Housing height (above ceiling)	210mm (8.26in)
Bubble diameter	178mm (7.0in)
Bubble depth (below ceiling)	94mm (3.7in)
Weight	2.5kg (5.5 lbs)

Environmental Specifications

Operating temperature:

Indoor	–10°C to 50°C (14°F to 122°F)
Humidity	0–95% non-condensing
Storage temperature	–20°C to 65°C (–4°F to 149°F)

Declarations

Regulatory Compliance

REG ID	SV SDUW
Emissions	47 CFR, Part 15
	EN 50130-4
	ICES-003
	EN 55022
Safety	UL1950
	CSA C22.2 No 950
	EN 60 950

FCC COMPLIANCE: This equipment complies with Part 15 of the FCC rules for intentional radiators and Class A digital devices when installed and used in accordance with the instruction manual. Following these rules provides reasonable protection against harmful interference from equipment operated in a commercial area. This equipment should not be installed in a residential area as it can radiate radio frequency energy that could interfere with radio communications, a situation the user would have to fix at their own expense.

EQUIPMENT MODIFICATION CAUTION: Equipment changes or modifications not expressly approved by Sensormatic Electronics Corporation, the party responsible for FCC compliance, could void the user's authority to operate the equipment and could create a hazardous condition.

Other Declarations

Thank you for using American Dynamics products. We support our products through an extensive and worldwide network of dealers. The dealer, through whom you originally purchased this product, is your point of contact if you have a need for service or support. Our dealers are fully empowered to provide the very best in customer service and support. Dealers should contact American Dynamics at (800) 507-6268 or (561) 912-6259 or on the web at www.americandynamics.net.

WARRANTY DISCLAIMER: Sensormatic Electronics Corporation makes no representation or warranty with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose.

NOTICE: The information in this manual was current when published. The manufacturer reserves the right to revise and improve its products. All specifications are therefore subject to change without notice.

LIMITED RIGHTS NOTICE: For units of the Department of Defense, all documentation and manuals were developed at private expense and no part of it was developed using Government Funds. The restrictions governing the use and disclosure of technical data marked with this legend are set forth in the definition of "limited rights" in paragraph (a) (15) of the clause of DFARS 252.227.7013. Unpublished - rights reserved under the Copyright Laws of the United States.

TRADEMARK NOTICE: *American Dynamics* and *Sensormatic* are trademarks or registered trademarks of Sensormatic Electronics Corporation. Other product names mentioned herein may be trademarks or registered trademarks of Sensormatic or other companies.

COPYRIGHT: Under copyright laws, the contents of this manual may not be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of Sensormatic Electronics.

MDR 9/03